


SB3622 22" x 9.9" Dovetail Plate

Use with the 3600GTO Dovetail Saddle Plate (DOVE3622)

5/16" thru-holes with crosswise spacing at 4.500"
for largest AP rings (i.e. for Riccardi-Honders)
Lengthwise spacing interval is 2.00"
Note: the DOVEPW can NOT be used in the
side-by-side configuration with this plate.

1/4-20 tapped auxiliary
holes for various acces-
sory attachment.

1/4" thru-holes with 5.500" and 7.450"
crosswise spacings for custom
applications. Lengthwise spacing
interval is alternating with three holes
at 0.500" and then a 1.00" interval;
then three more and so on.

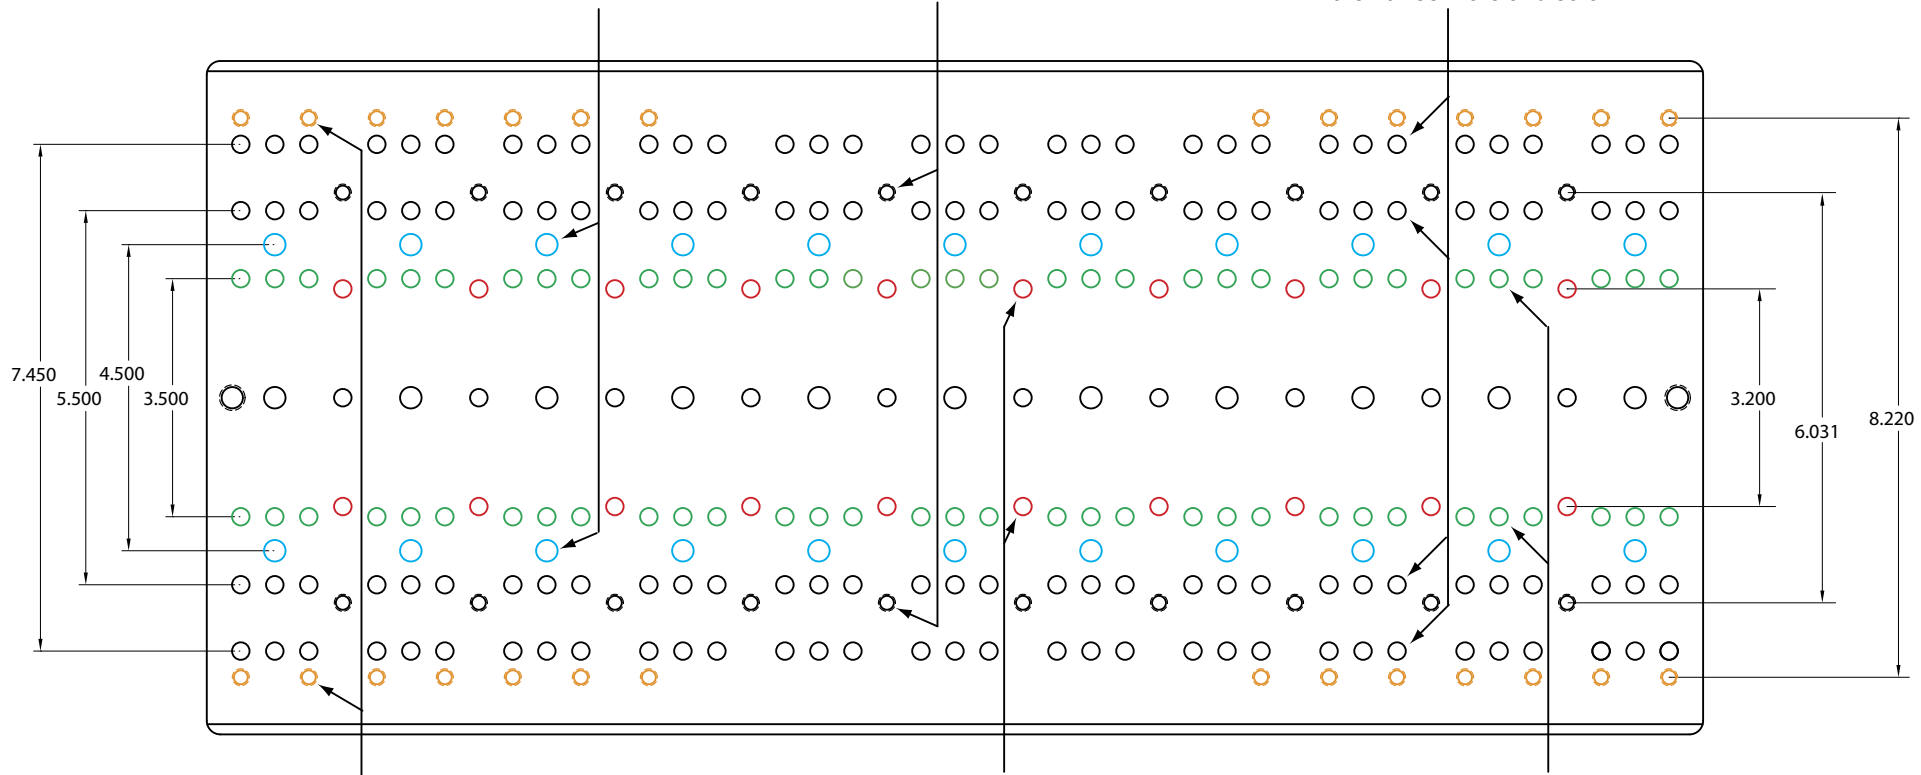

1/4-20 tapped holes with 8.220" crosswise
spacing used for locking SB3622 to the
DOVE3622 for extra rigidity and security.
Lengthwise spacing interval is 1.000".

1/4" thru-holes with 3.200"
crosswise spacing for AP rings.
Lengthwise spacing interval is
2.00"

1/4" thru-holes with 3.500" crosswise
spacing for rings having the Losmandy
spacing. Lengthwise spacing interval
is alternating with three holes at
0.500" and then a 1.00" interval; then
three more and so on.